



## LOCKING DEVICE INSTALLATION INSTRUCTIONS

 <b>WARNING – USE OF LOCKING DEVICES</b>	
	<ul style="list-style-type: none"><li>• Always keep your firearm pointed in a safe direction, including when you are installing or removing your locking device.</li><li>• Always verify that your firearm is completely <b>unloaded</b> before installing your locking device.</li><li>• Do <u>not</u> install locking devices in the trigger guard unless the instructions specifically require it; otherwise always keep your fingers and locking device outside the trigger guard during device installation and removal.</li><li>• Store firearms, ammunition and keys separately and securely, away from children and careless adults; do <u>not</u> store your firearm with the keys in the locking device.</li><li>• Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.</li><li>• While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Remember that any mechanical device can be bypassed with enough time, knowledge, determination and equipment.</li></ul>
<b>LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY</b>	

**Do not store keys  
in lock.**

**It is important to use the locking device on your Ruger® firearm!**

**Keep the muzzle pointed in a safe direction and your fingers outside the trigger guard at all times!**

### **To Install the Factory-Supplied Locking Device:**

1. **Be sure the firearm is completely unloaded and contains no cartridges or cartridge cases!**
2. Completely swing out the cylinder.

3. Apply the cable to the cylinder as shown in Figure 3.  
**For the LCR-22:** Apply the lock by placing the cable through the frame and trigger guard as shown in Figure 4. **Do not apply the cable directly to the trigger guard! Only apply the cable as shown in Figure 4.**
4. To lock: With the key turned to the farthest clockwise position, insert the loose end of the cable into the lock. Turn the key counterclockwise and remove the key.
5. Once the lock is securely closed, pull firmly on the lock to test the connection and be sure it is locked. **Do not leave or store your firearm with the key in the lock!** Store your locked, unloaded firearm and the key in secure, separate locations, away from ammunition, children, and unauthorized adults.



Figure 3

*Correct Installation  
of Lock For Ruger®  
LCR® Revolvers*

*Correct Installation of  
Lock For Ruger®  
LCR-22 Revolvers Only*



Figure 4