


# LOCKING DEVICE INSTALLATION INSTRUCTIONS

 <b>WARNING – USE OF LOCKING DEVICES</b>	
 <p><b>Do not store keys in lock.</b></p>	<ul style="list-style-type: none"><li>• Always keep your firearm pointed in a safe direction, including when you are installing or removing your locking device.</li><li>• Always verify that your firearm is completely <u>unloaded</u> before installing your locking device.</li><li>• Do <u>not</u> install locking devices in the trigger guard; always keep your fingers and locking device outside the trigger guard during device installation and removal.</li><li>• Store firearms, ammunition and keys separately and securely, away from children and careless adults; do <u>not</u> store your firearm with the keys in the locking device.</li><li>• Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.</li><li>• While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Remember that any mechanical device can be bypassed with enough time, knowledge, determination and equipment.</li></ul>
<b>LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY</b>	

**Use the Correct Lock:** While the basic locking device is substantially similar for all Ruger® firearms, due to the different shapes of the many Ruger® firearms, some firearms may utilize different locking devices. The cable lock is used with the RUGER AMERICAN RIMFIRE® rifle. **It is important to use the correct locking device!**

To Install the Factory-Supplied Locking Device:

1. Place the safety in the “Safe” or “S” position. **Keep the muzzle pointed in a safe direction and your fingers outside the trigger guard at all times!**
2. **Remove the magazine. Draw the bolt fully to the rear and verify that the firearm is completely unloaded and contains no cartridges or cartridge cases!**

3. Remove the bolt from the rifle by depressing the bolt stop and sliding the bolt out of the firearm.
4. Insert the cable directly into your RUGER AMERICAN RIMFIRE® rifle as shown below in Figure 3.
5. To lock: With the key turned to the farthest clockwise position, insert the loose end of the cable into the lock. Turn the key counterclockwise and remove the key.
6. Once the lock is securely closed, pull firmly on the lock to test the connection and be sure it is locked. **Do not leave or store your firearm with the key in the lock!** Store your locked unloaded firearm and the key in secure, separate locations, away from ammunition, children, and unauthorized adults.



Correct Installation of Lock  
For RUGER AMERICAN RIMFIRE®



**WARNING:** WHEN REINSTALLING THE BOLT, ONLY USE THE ORIGINAL BOLT WITHIN YOUR FIREARM. **DO NOT** ATTEMPT TO INSERT OR USE A BOLT ON ANY FIREARM WHICH WAS NOT PURCHASED WITH THE FIREARM. DAMAGE TO THE FIREARM, SERIOUS PERSONAL INJURY, AND/OR DEATH MAY RESULT FROM AN IMPROPERLY MATCHED BOLT AND RECEIVER COMBINATION.